 
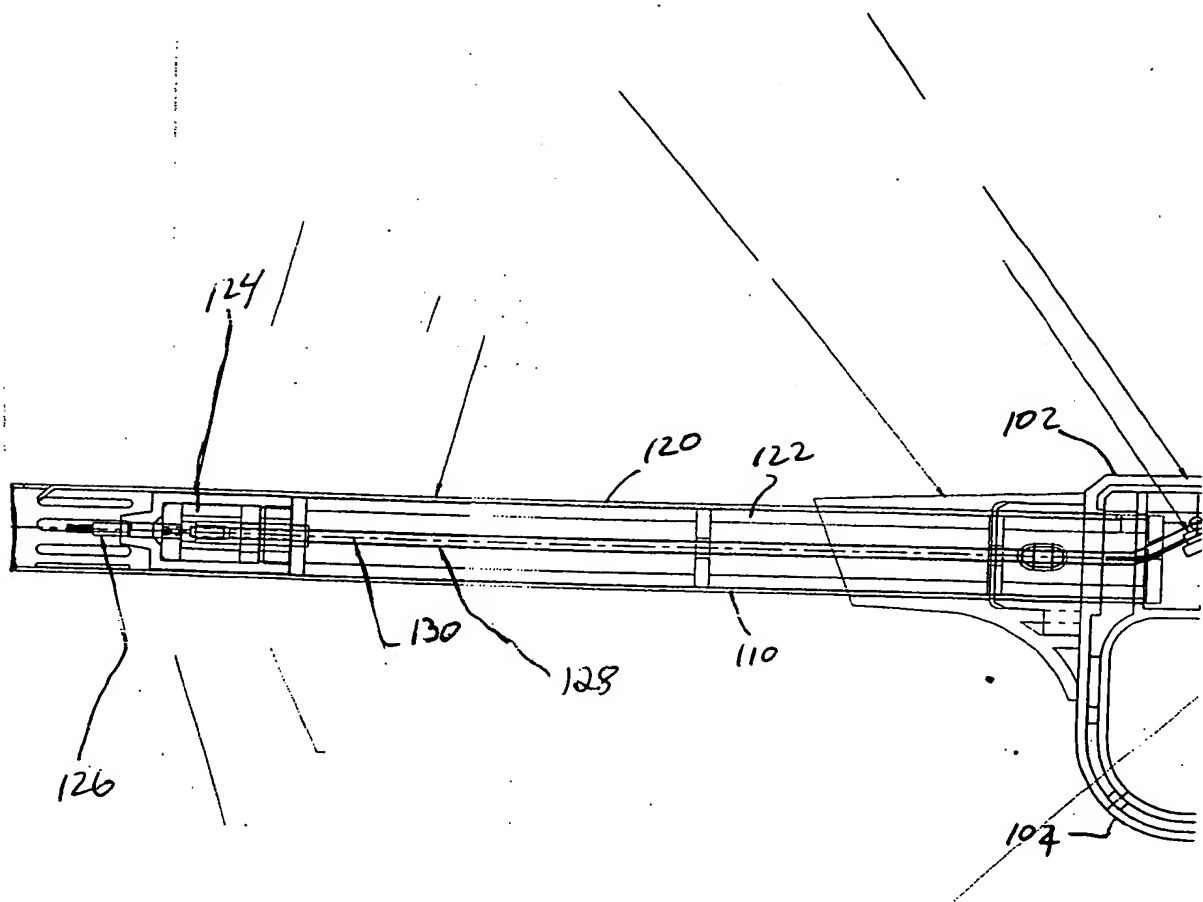 


431
153

3700
1-12

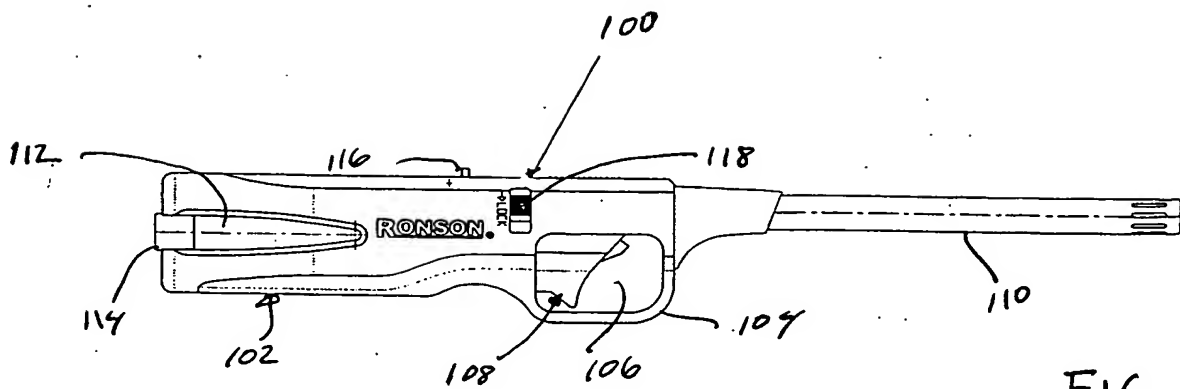

10039203 010402

FIG 3

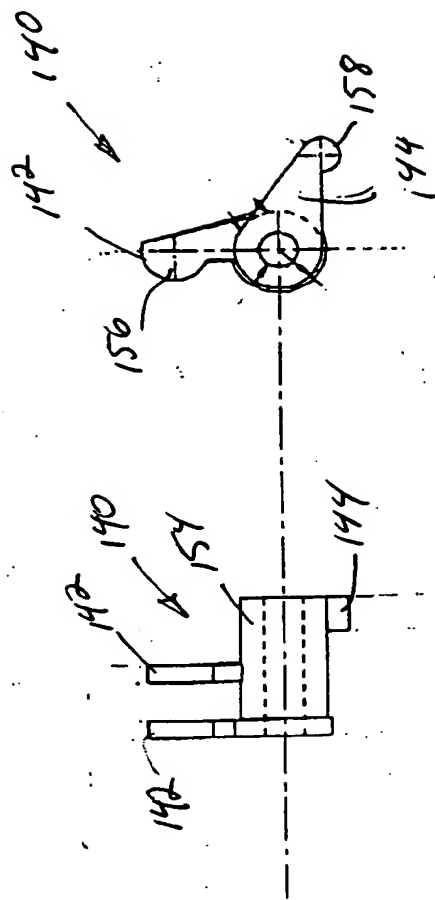 


Fig. 7B

Fig. 7A

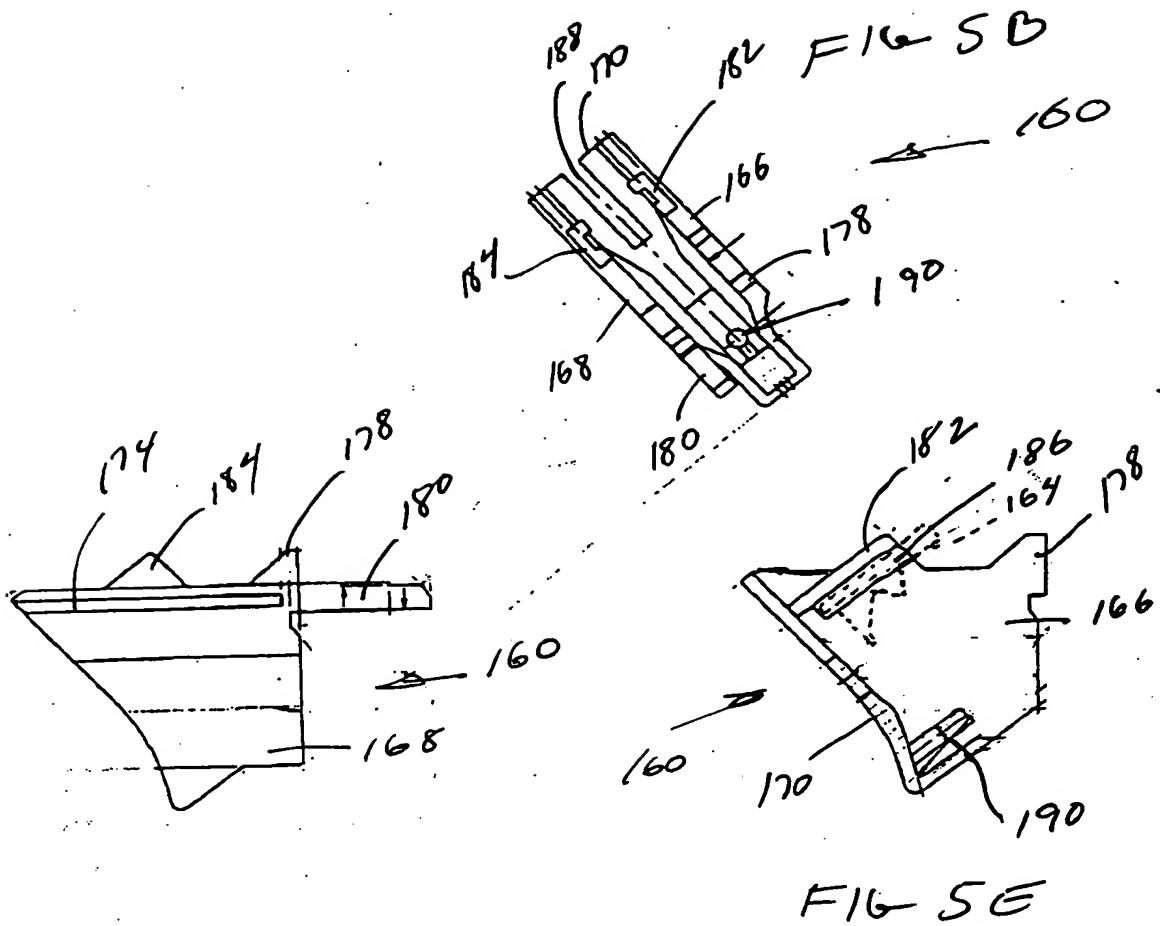 


FIG 5A

FIG 5E

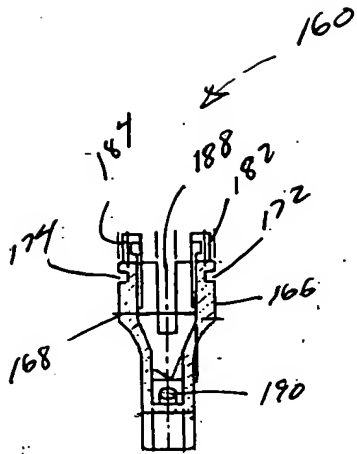 


FIG 5F

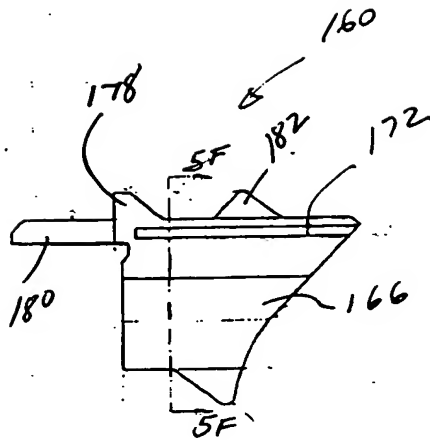 


FIG 5C

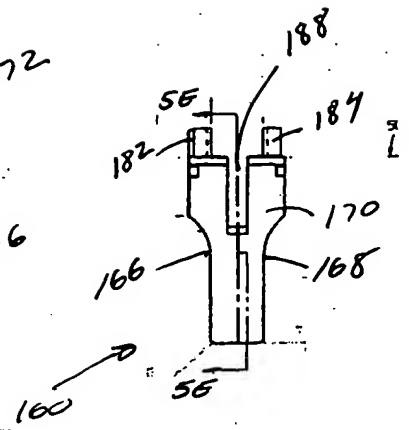 


FIG 5D

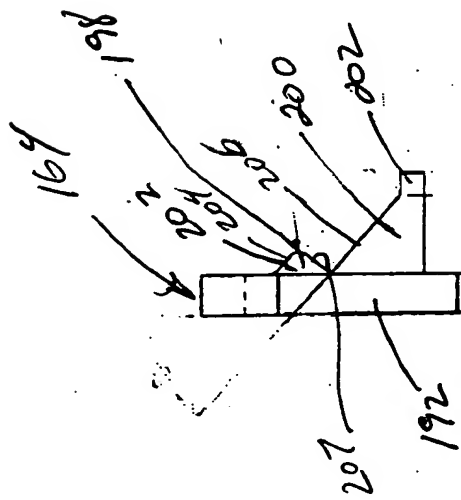 


FIG-6A

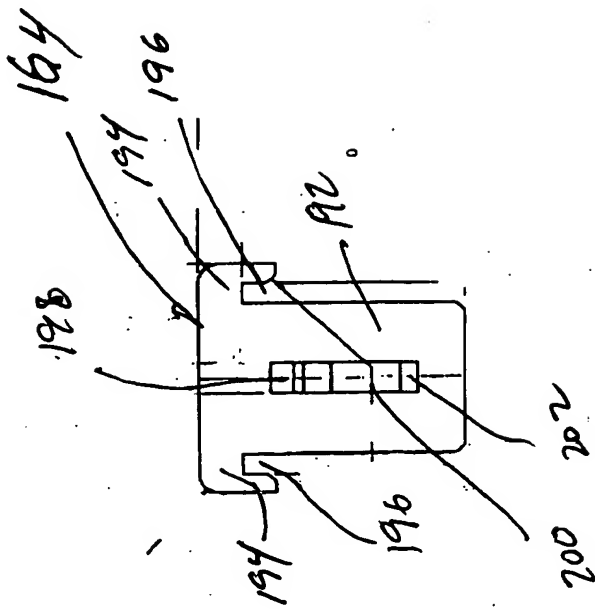 


FIG-6B

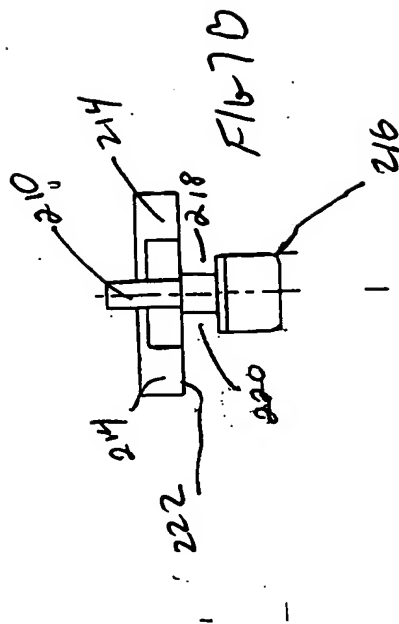 
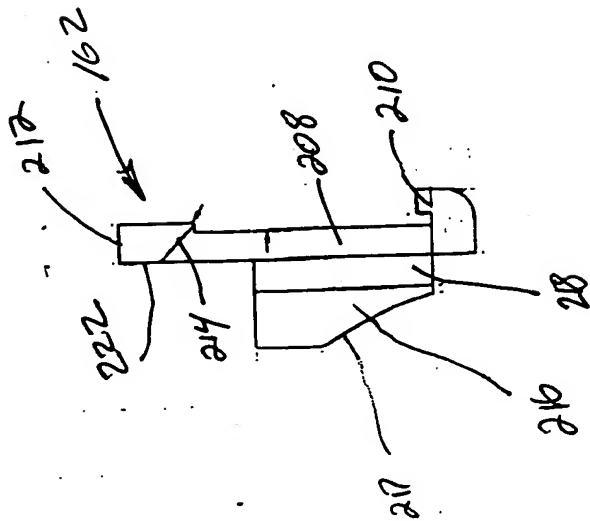 
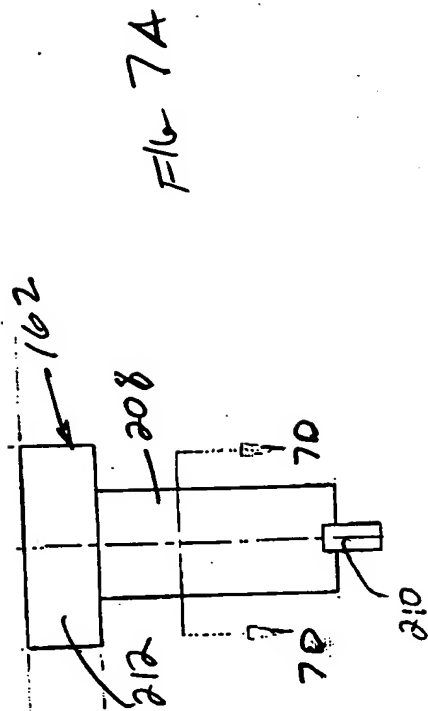 
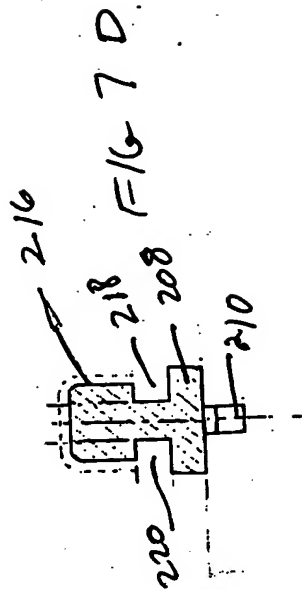 


FIG-8A



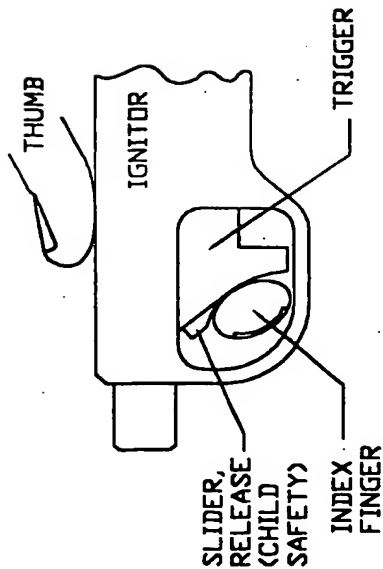 


FIG-8B

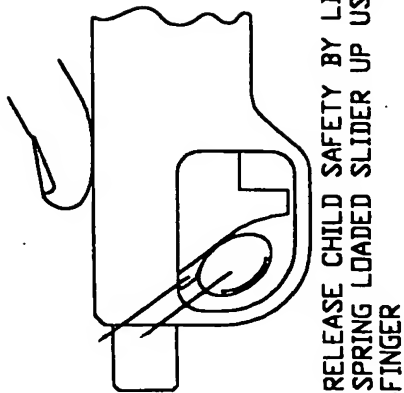 


RELEASE CHILD SAFETY BY LIFTING THE
SPRING LOADED SLIDER UP USING INDEX
FINGER

 FIG-8D

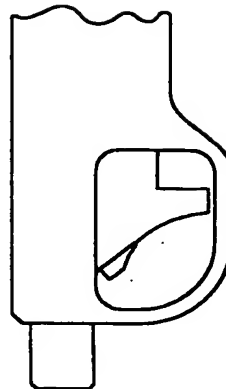

 IGNITOR AT REST WITH CHILD SAFETY
RESET AND IGNITOR SHUT OFF.

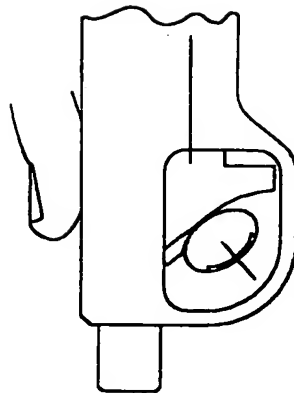

WHILE HOLDING CHILD SAFETY RELEASE
SLIDER UP, SQUEEZE TRIGGER TO LIGHT
IGNITOR

FIG-8C


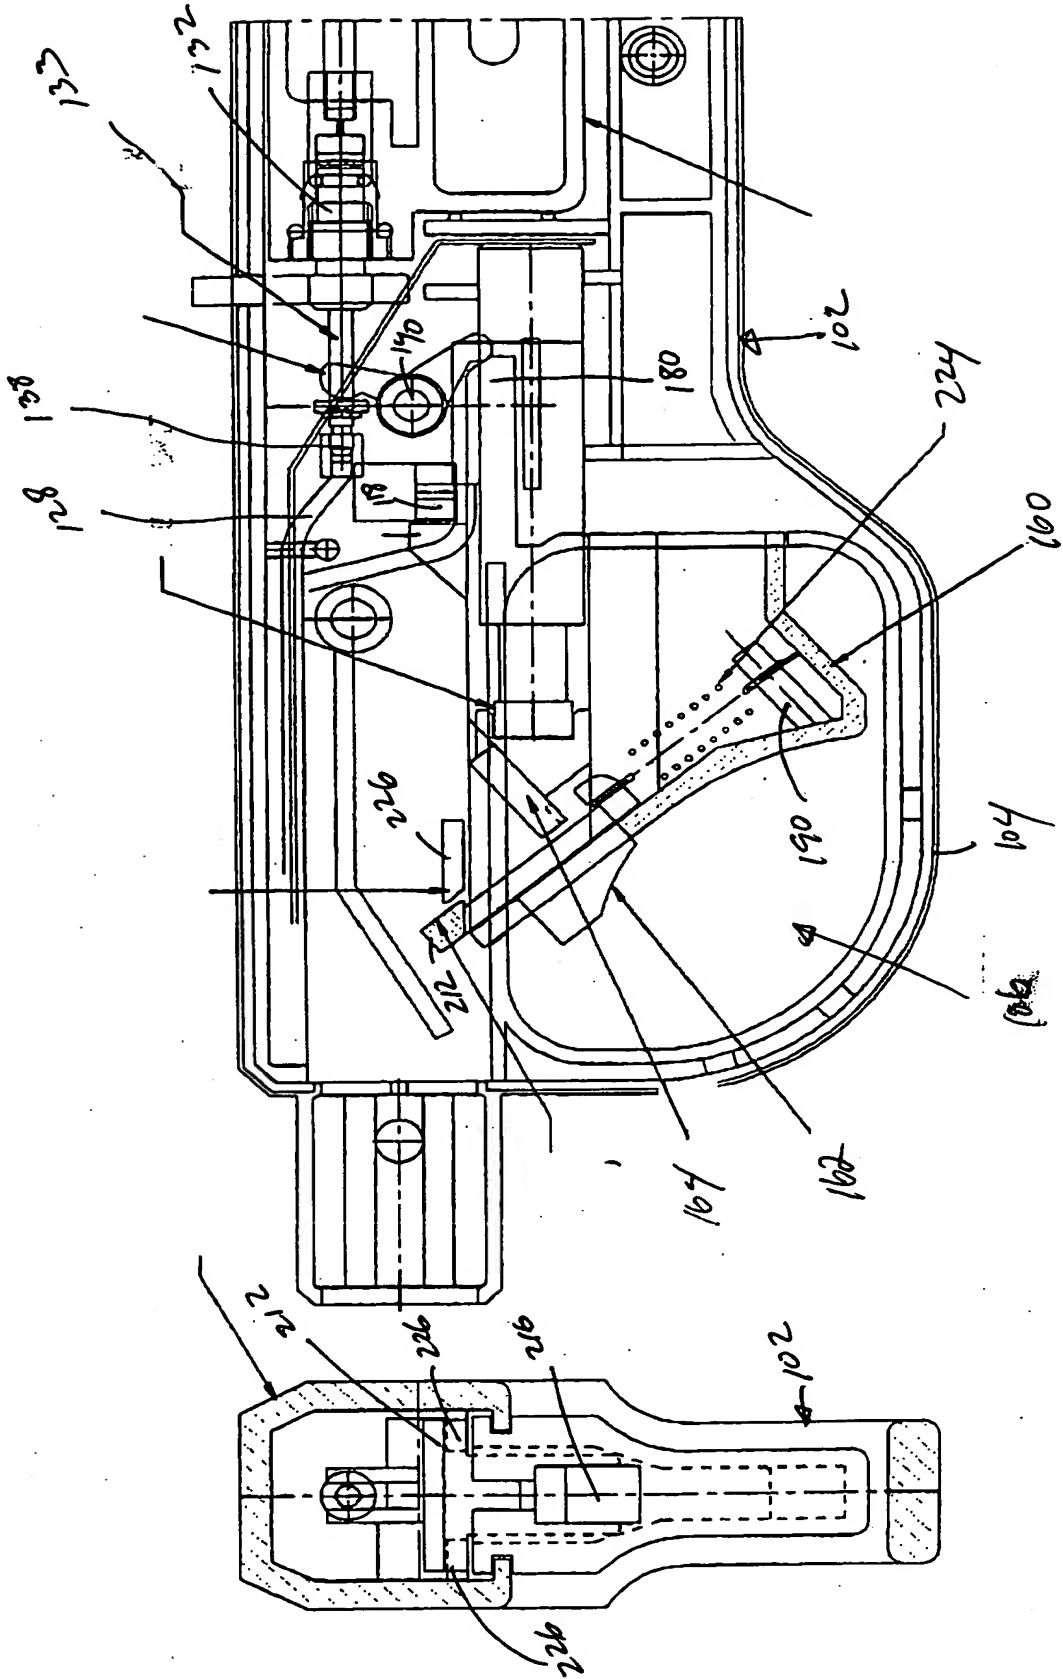 


Fig 9B

 
Fig 9A

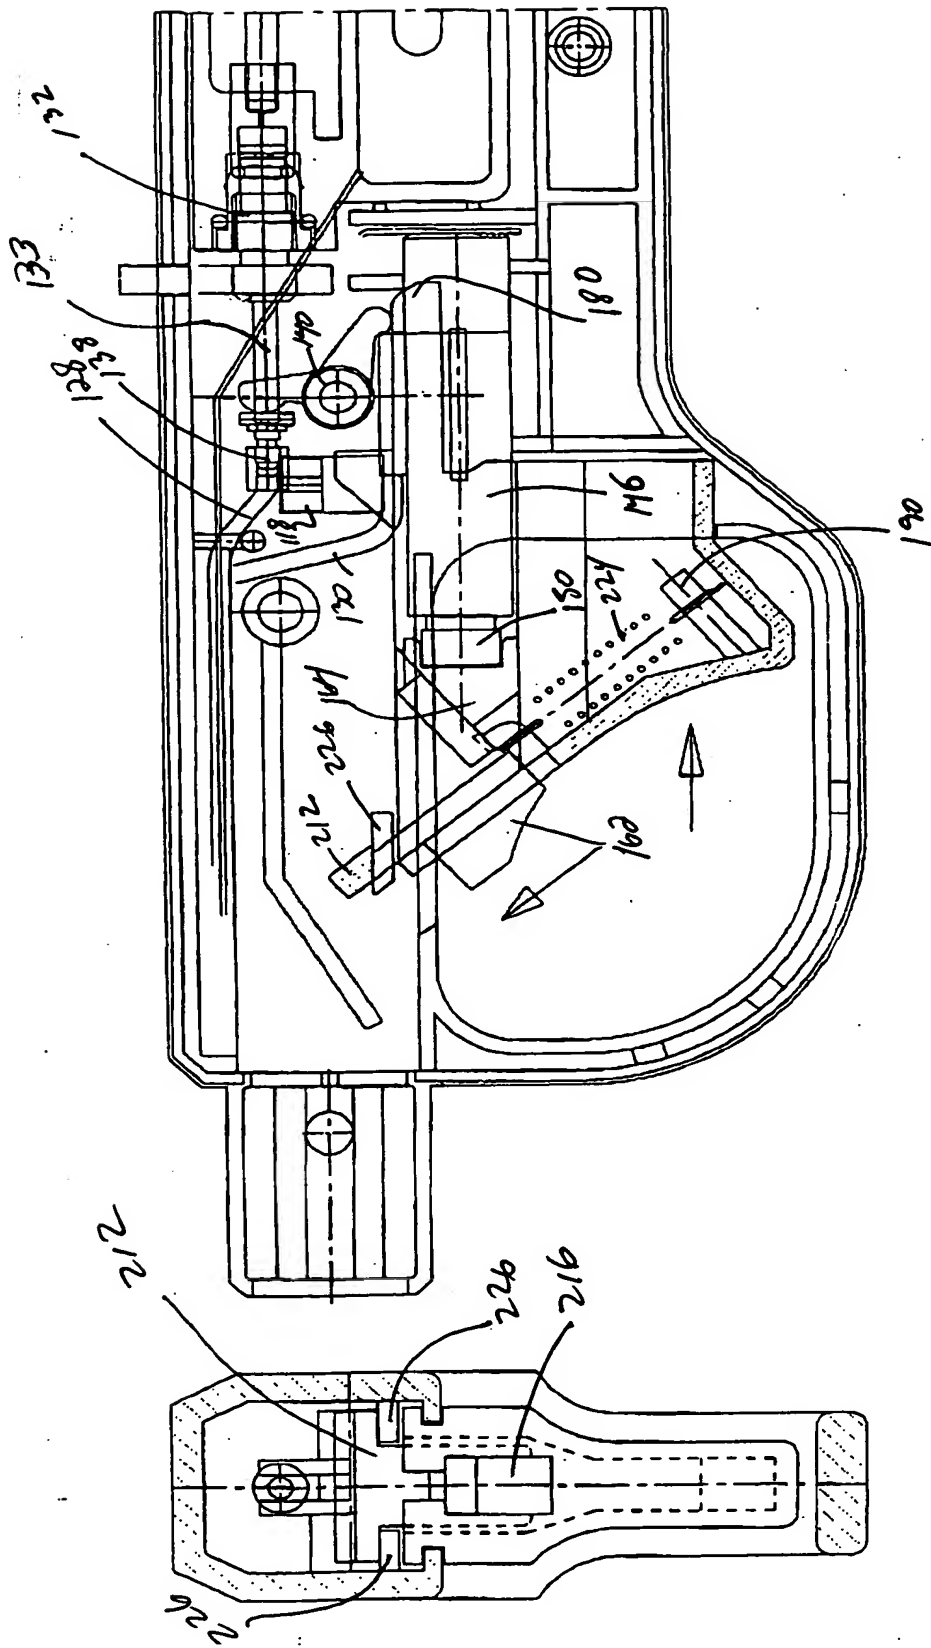

F16-10A

FIG-OB

 Fig. 11

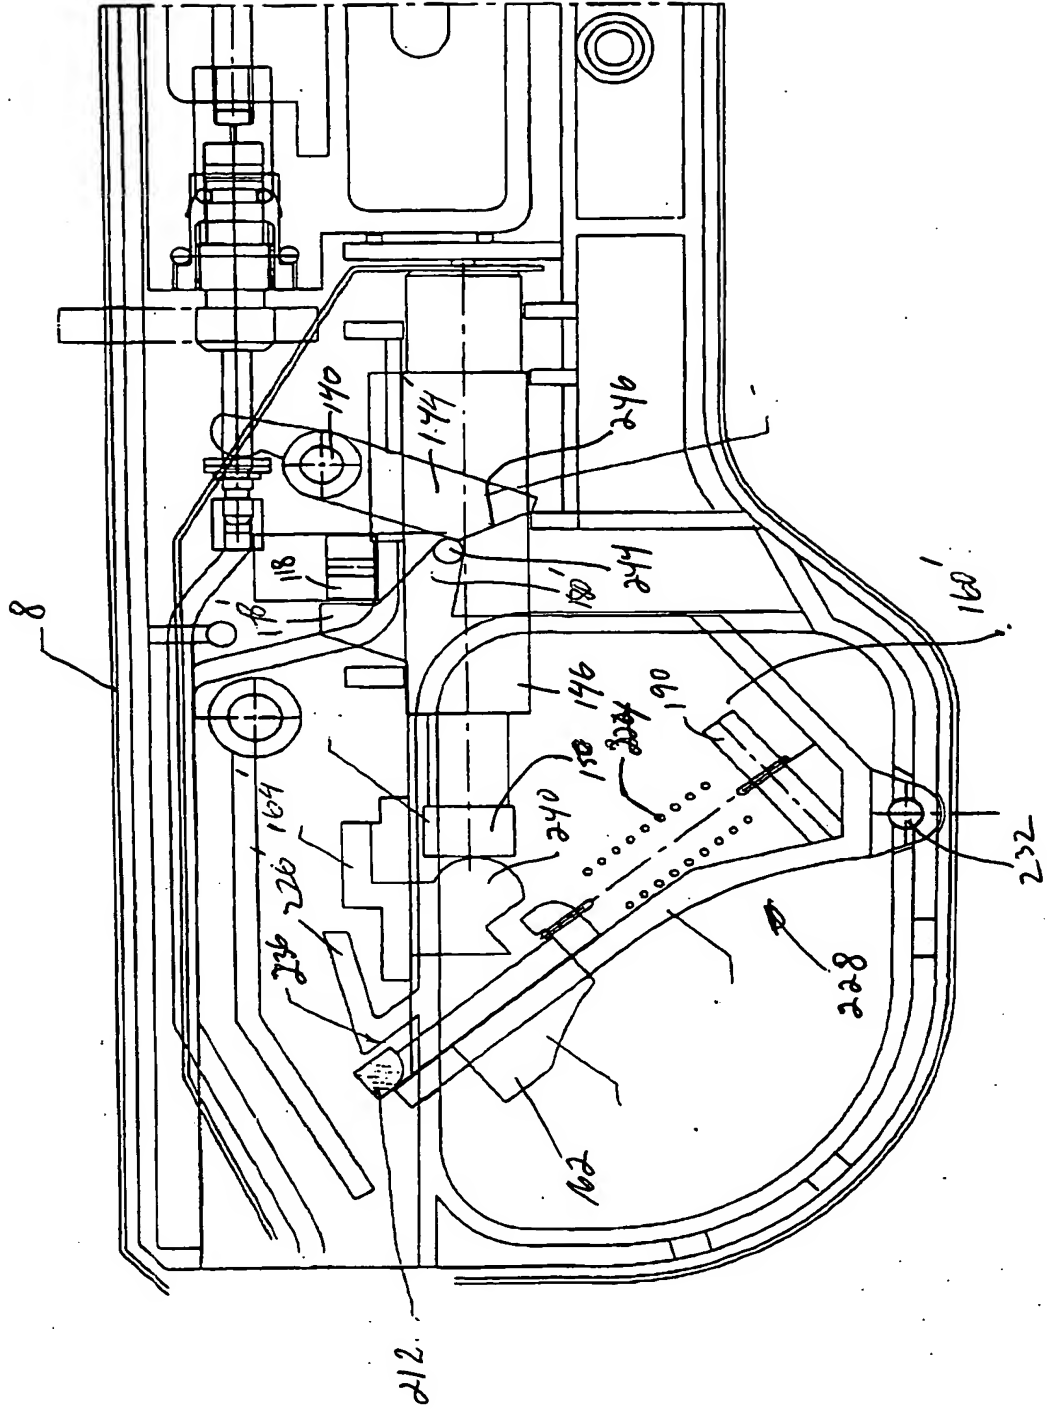

F16-10